


SAMSUNG

QUICK SETUP GUIDE

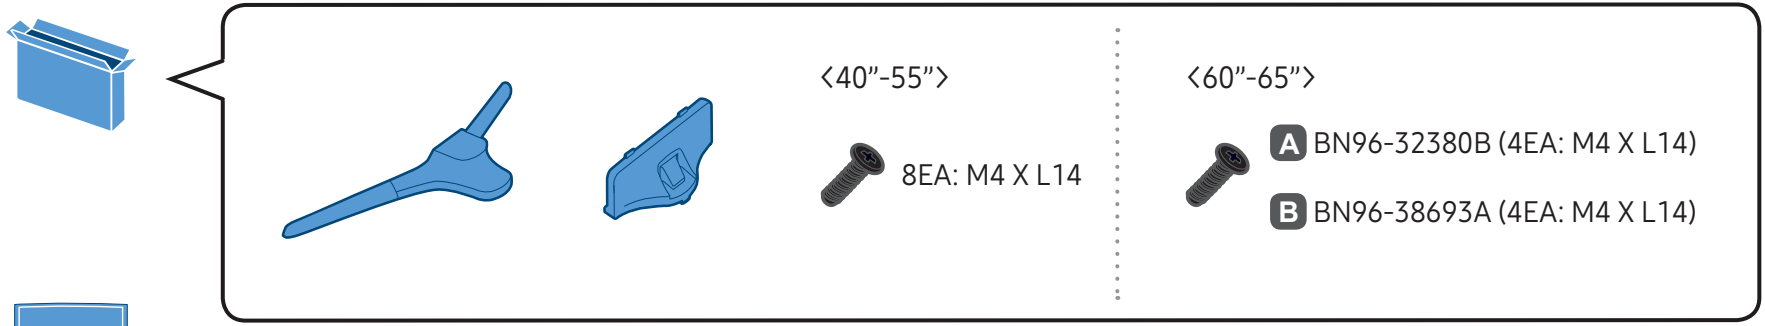


Parts list for different TV sizes:


- <40"-55">: 8EA: M4 X L14
- <60"-65">:
 - A BN96-32380B (4EA: M4 X L14)
 - B BN96-38693A (4EA: M4 X L14)

1


<55"-65">

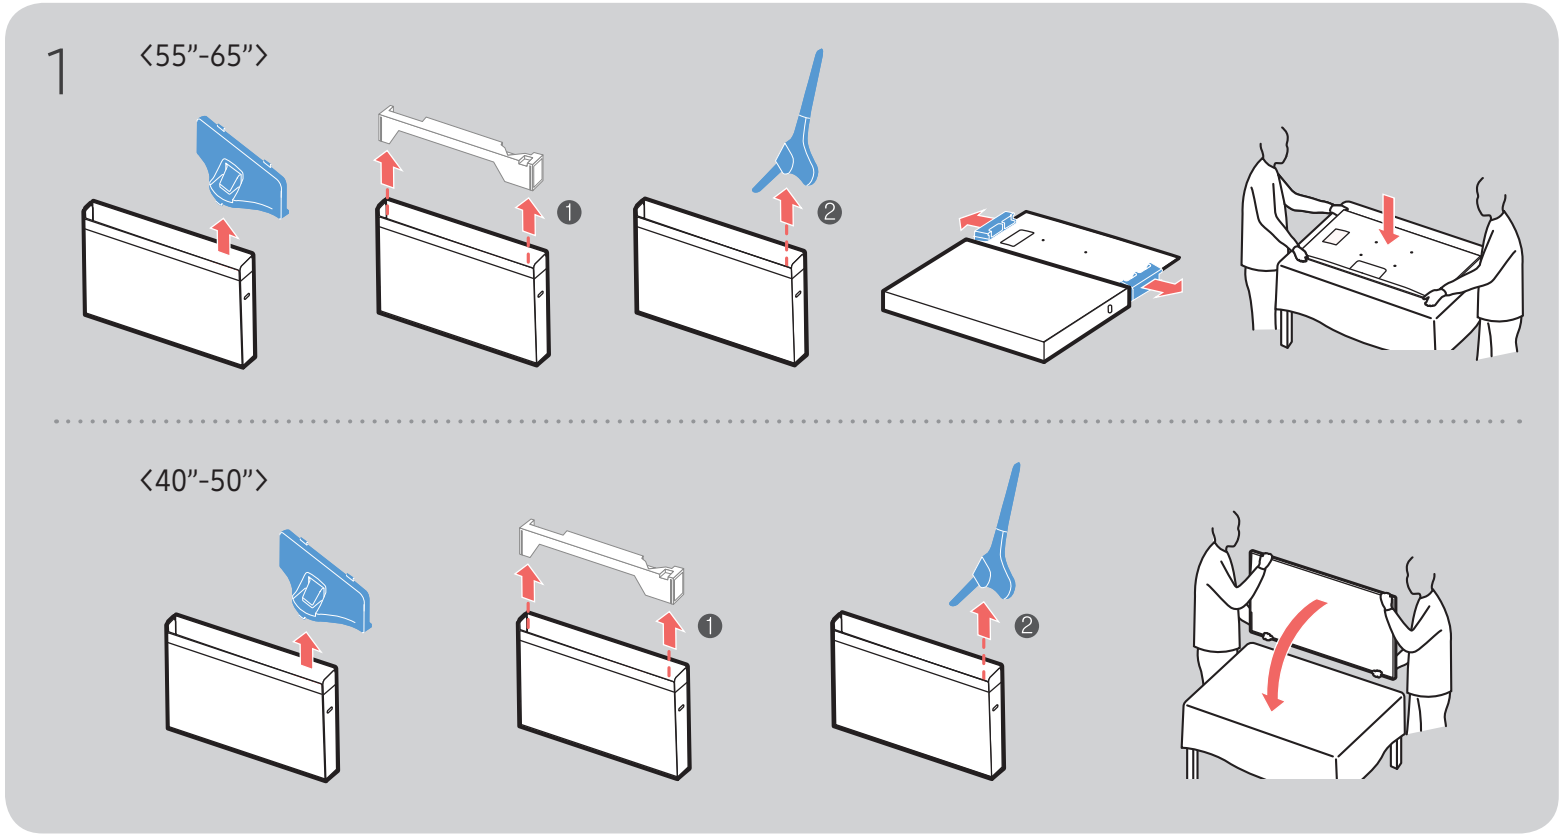

<40"-50">

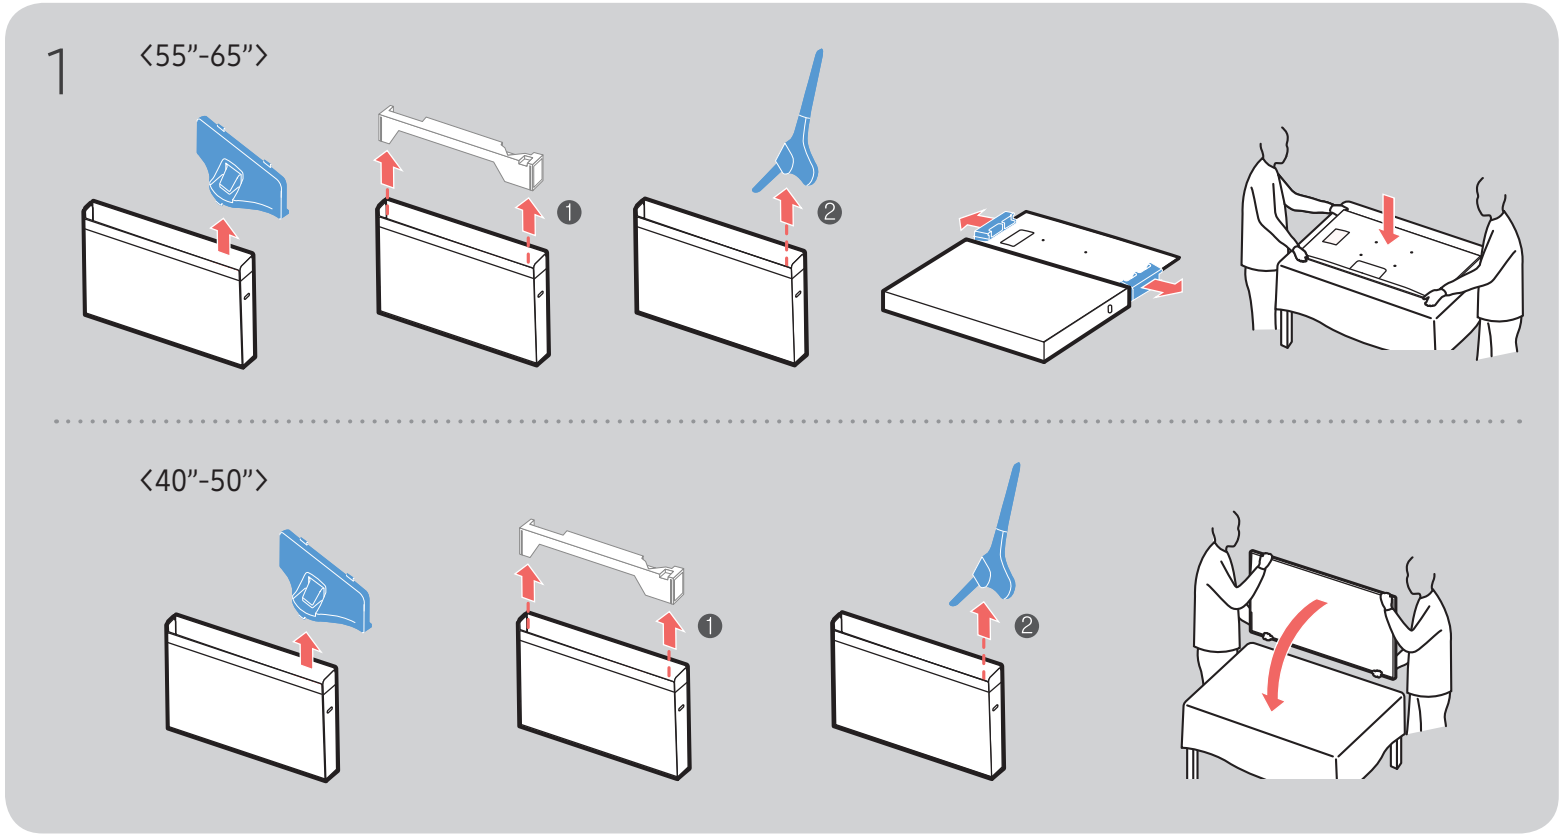


2

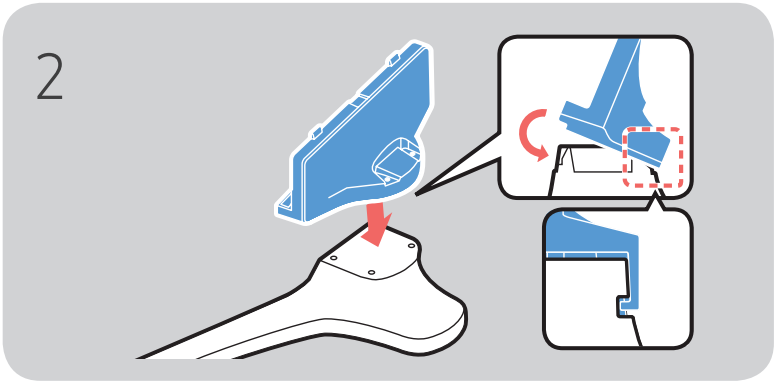


3

4EA: M4 X L14
(60"-65": A BN96-32380B)

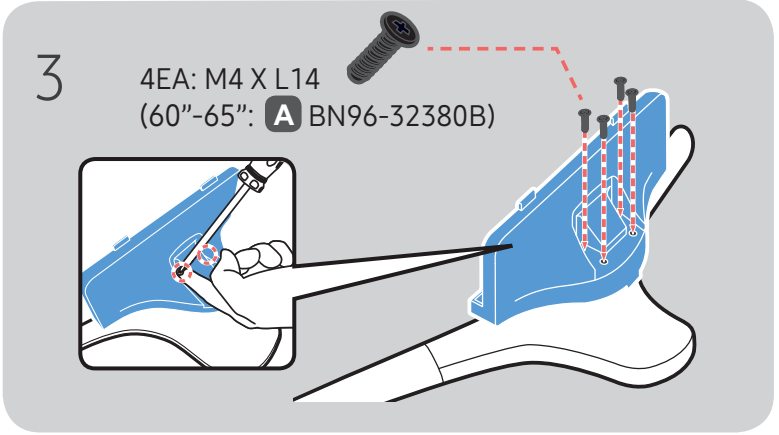


4

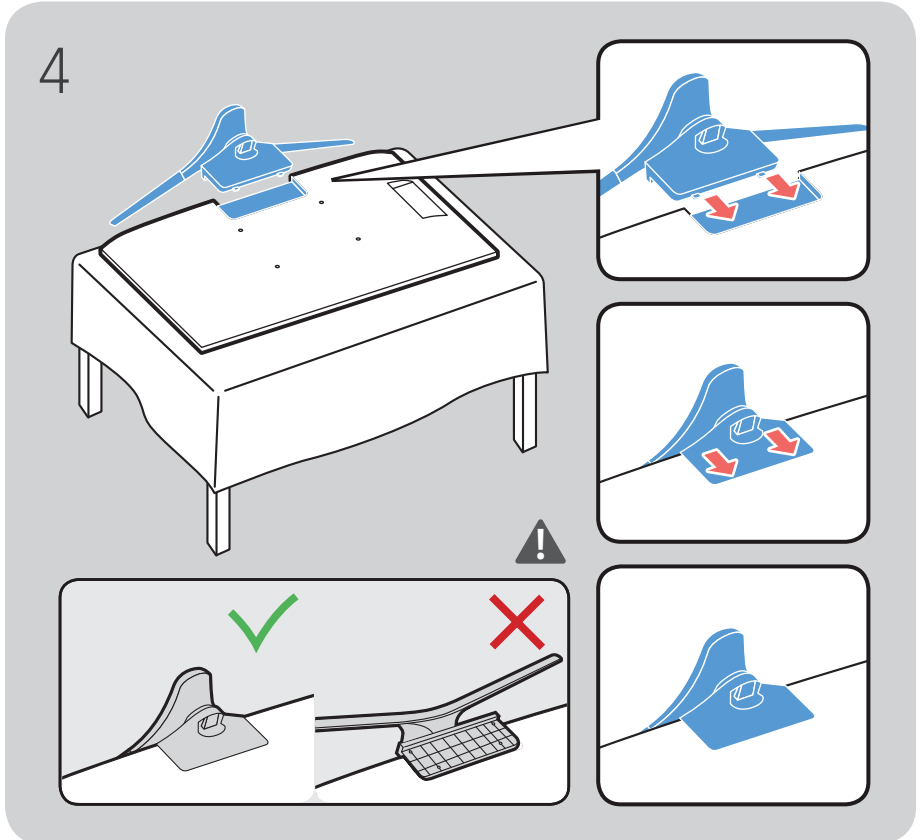

Warning icons: exclamation mark, checkmark, and X.


5

4EA: M4 X L14
(60"-65": B BN96-38693A)

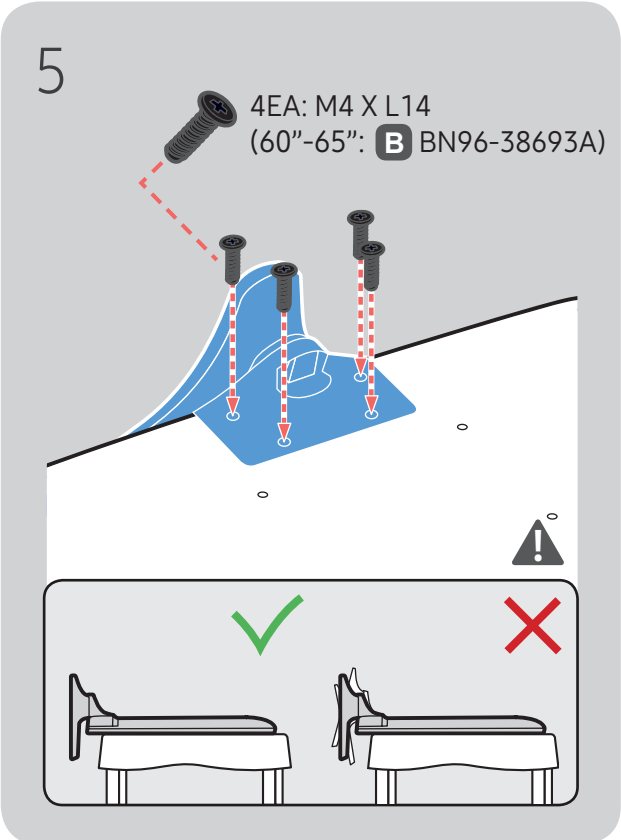

Warning icons: exclamation mark, checkmark, and X.

6

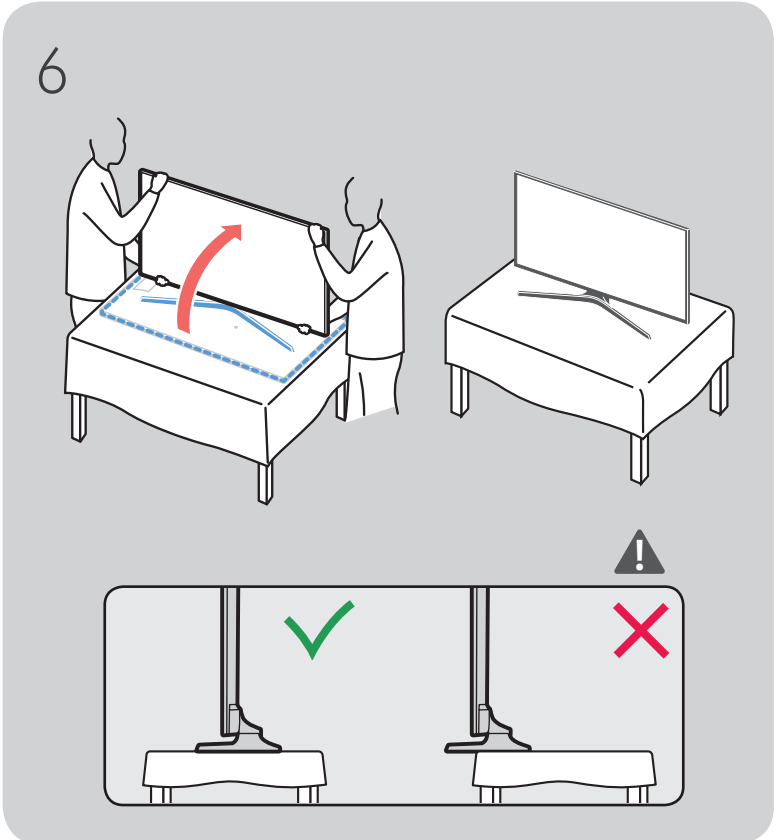

Warning icons: exclamation mark, checkmark, and X.

